

IN112/IN114/IN116

Quick Start Guide

Guide de Démarrage Rapide

Schnellstart-Anleitung

Guía de Inicio Rápido

Guida di Consultazione Rapida

Snelstartgids

Guia de Início Rápido

Snabbstarthandbok


Краткое руководство

빠른 시작 안내서

快速入门指南

Panduan Ringkas

دليل التشغيل السريع

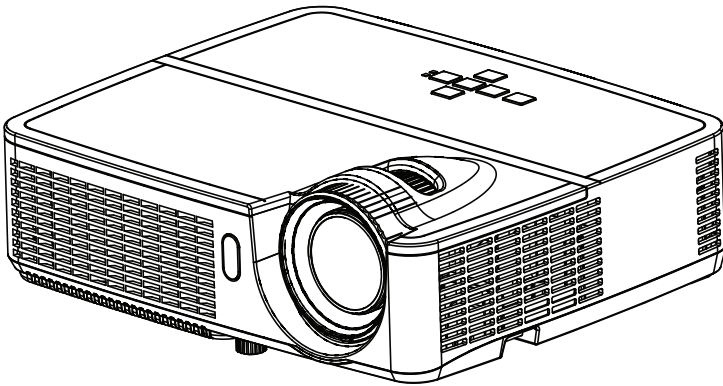

Regulatory model IN112/IN114/IN116

P/N PA139-4000-00



DISPERINDAG No. 0287/1.824.51/09.03

InFocus


Bright Ideas Made Brilliant

 Please read the safety instructions booklet before setting up the projector.

1

Unpack the box


Here's what's included:

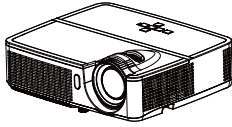


Projector




Remote

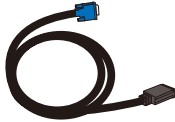

Computer Cable

 

Power Cable

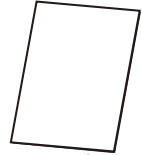


Documentation Pack

Save the box and packing materials.

2

Put batteries in the remote

The remote uses 2 AAA batteries.

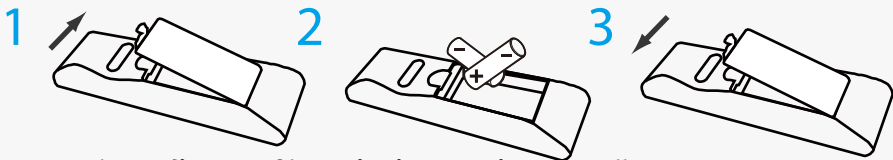

Please dispose of batteries in an environmentally proper manner.

Buy a Full-Featured Remote and Other Custom Accessories

www.infocus.com/store

Status Indicator Panel

The top of your projector includes a convenient indicator panel with symbols that light up to show important status.

- POWER
- TEMP/LAMP


For details, see Troubleshooting.

3

Connect source

Color-coded connections make it easy.
You can connect more than one source if needed.

Connect to: Computer (using VGA)

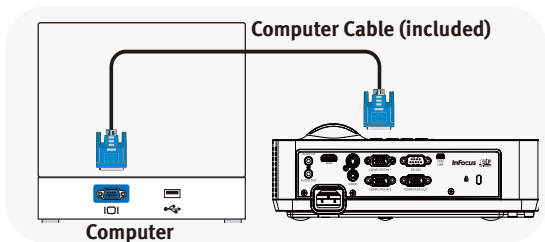


Got an Apple computer?

You may need an adapter. For more information, see How-To Guides at www.infocus.com/support/howto

OR

Connect to: DVD, VCR




- 1 Connect video using either a Composite Video cable, an S-Video cable or an HDMI cable
- 2 Connect audio using a Mini Plug Audio Y-Cable (not needed for HDMI)
Available from A/V dealer or retailer

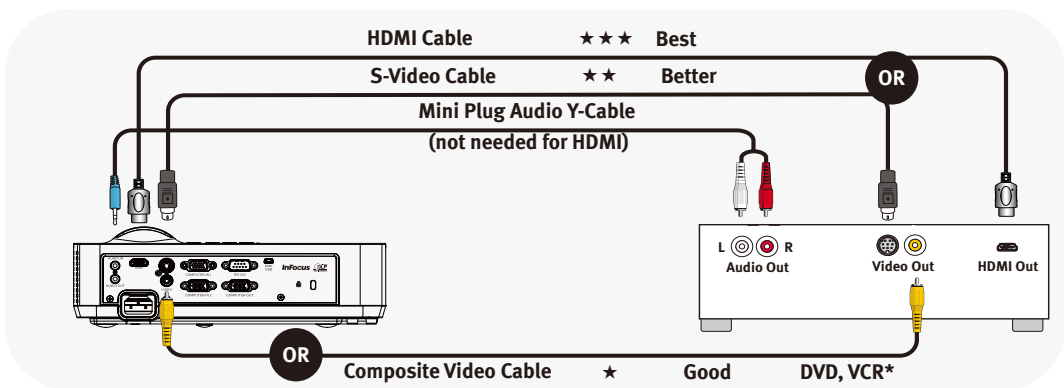

*Also for game console, cable box, HDTV Receiver

4


Turn on projector and source

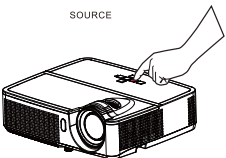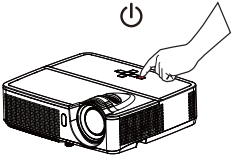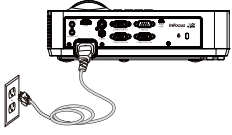

1 Connect the power cord to the projector and to an electrical outlet

The power light on the projector will light blue.

2 Turn on the projector

Press power  (on the projector or remote).
The power light will light blue.


3 Wait for the lamp to warm up

It will take a minute for the lamp to reach full brightness.



Warning: Do not look directly into the lens while the projector is being used.

4 Turn on computer or other source

You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the FN key while pressing a key labeled CRT/LCD, LCD/VGA, a monitor icon , or similar. Key combos for popular models:

Apple F7

HP/Compaq Fn+F4 or Fn+F6

Sony Fn+F7

Dell Fn+F8

IBM ThinkPad Fn+F7

Toshiba Fn+F5




Fujitsu Fn+F10

Complete laptop activation chart at www.infocus.com/support



Important: If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).


5 Change source if needed

If needed, press **SOURCE** (on the projector or remote), use  and  to highlight the desired source, and press the  on the projector (or **SELECT** on the remote) to choose a different source.

5

Adjust the picture


1 Height

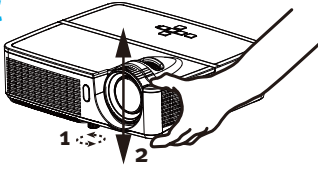

- 1 Lift the front of the projector to the desired height.
- 2 Rotate the foot under the front of the projector.


2 Keystone

keystone

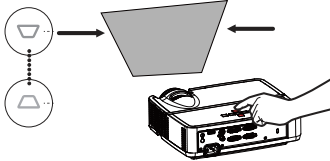

Press the keystone buttons to make the picture square.

3 Zoom and focus

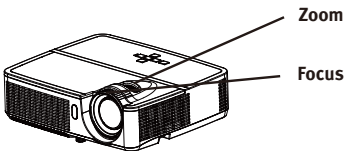

Adjust zoom first, then focus the center of the image.

Need Help?

help



Press the Help button on the remote at any time to get help with connecting sources and improving the picture.

Interactive Screen Size and Distance Calculator

www.infocus.com/calculator


Buy a Screen and Other Custom Accessories

www.infocus.com/store

Ceiling mount?

To flip the image, turn on the **Ceiling Mount** setting in the **Basic** menu.


Using the menu

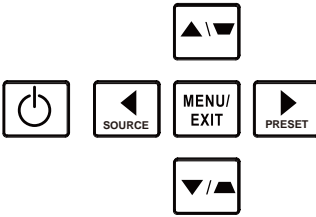

- 1 Press **MENU**, then press ∇ or \blacktriangle to review the menu options.
 - 2 To enter a submenu, highlight the desired submenu and press \blacktriangleright on the projector or **Select** on remote.
 - 3 To adjust a menu setting, highlight the desired menu option and press \blacktriangleleft or \blacktriangleright .
 - 4 Press the **MENU** button to exit the menu system.
- Note:** Most picture settings are disabled (gray) unless a source is being displayed.

6

Turn off the projector

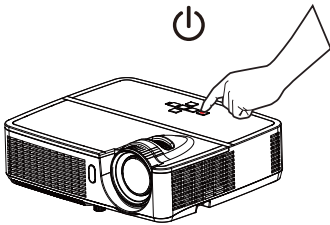

Press the power button

The power light on the projector will blink while the fan cools the lamp. If you need to unplug the projector, wait until the fan stops.

Note: While the power light is blinking, button presses on the projector and remote are ignored.

(READ THE REFERENCE GUIDE)

Download it at www.infocus.com/support

The Reference Guide is available in multiple languages. It covers advanced setup and operation, including lamp replacement instructions.

(TROUBLESHOOTING)

If there is no picture or the picture is blank



If the power light is off, make sure the power cord is connected and plugged into a live electrical outlet, and then press the **POWER** button on the keypad or remote.

Check video source and cables. Make sure the video source (computer, DVD player, VCR, etc.) is turned on and cables are securely connected between the source and the projector.

Make sure your computer's video port is enabled. Press the key combination that activates your laptop's external video port (see step 4). If there is still no image, restart your laptop.



Press the SOURCE button on the projector or remote and use \wedge and \vee to highlight the desired source. Then press the \blacktriangleright on the keypad (or the **SELECT** button on the remote) to activate the source.



Press the Auto Image button.

If "Signal out of range" is shown, or the picture looks bad



Press the Auto Image button. If that doesn't help (and the source is a computer), reduce your computer's display resolution or vertical refresh rate.

If "Replace lamp" is shown

Turn the projector off and wait at least one minute, then turn it on again. If the replace lamp message is displayed again, the lamp needs to be replaced.

For lamp replacement instructions, see the Reference Guide, which can be downloaded at www.infocus.com/support

Only InFocus genuine lamps are tested for use in this projector.

If the projector is overheating



POWER



TEMP/LAMP

Turn the projector off and remove anything that may be blocking the air vents on its sides. Leave the projector off for at least one minute to let it cool before turning it on again. **IMPORTANT:** Continuous operation while overheating may reduce the lifetime of the lamp and/or projector.

More troubleshooting options are in the Reference Guide

Download it at www.infocus.com/support



WARNING: In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector while the projector is in use. See the safety instructions booklet for more details.

Questions? We're here to help!

Visit us at: www.infocus.com/support

We're here to support you with your new purchase. We can help you with...

- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- Selecting optional accessories
- Product warranty protection plans

USA, Canada, Latin America

Customer Support Telephone

+1 (503) 207-4700

TOLL FREE: **877-388-8360**

Mon-Fri, 6 am - 5 pm Pacific

Asia Pacific

Customer Support Telephone

Singapore: **65 6603 9871**

China: **800-888-9288**

Australia: **1300-290-922**

Australia Direct Sales: **61430-223-138**

New Zealand: **008000-4636287**

Mon – Fri, 9 a.m. – 5 p.m. SGT

ap.support@infocus.com

Europe, Middle East, Africa

Customer Support Telephone

France: **0800 905-993**

Germany: **0800 181-3649**

Italy: **0800 877-238**

Spain: **900 993-163**

UK: **0800 028-6470**

Other: **008000 463-6287**

Mon-Fri, 08:00 - 17:00 CET

emea.support@infocus.com

Hg - Lamp contains mercury. Manage in accordance with local disposal laws.

See www.lamprecycle.org

Declaration of Conformity

Manufacturer: InFocus Corporation, 13190 SW 68th Parkway, Suite 200, Portland, OR 97223-8368 USA

We declare under our sole responsibility that this projector conforms to the following directives and norms: ErP Directive 2009/125/EC, EMC Directive 2004/108/EC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 2006/95/EC, Safety: IEC 60950-1: 2005; EN 60950-1:2006 +A11:2009.

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP® and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. InFocus, In Focus, and INFOCUS (stylized) are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.



NOTE: This product is covered electrical and electronic equipment under the European Union's Waste from Electrical and Electronic Equipment ("WEEE") Directive (2002/96/EC). The WEEE Directive requires that covered equipment be collected and managed separately from typical household waste in all EU member states. Please follow the guidance of your local environmental authority or ask the shop where you purchased the product for collection or recycling options.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment that are not expressly approved by InFocus Corp. may void the user's authority to operate the equipment.

Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals

cULus. Other specific Country Approvals may apply. Please see product certification label.

Input ratings: 100-240Vac, 2.6A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.