


HP Neverstop Laser 1000 series




1

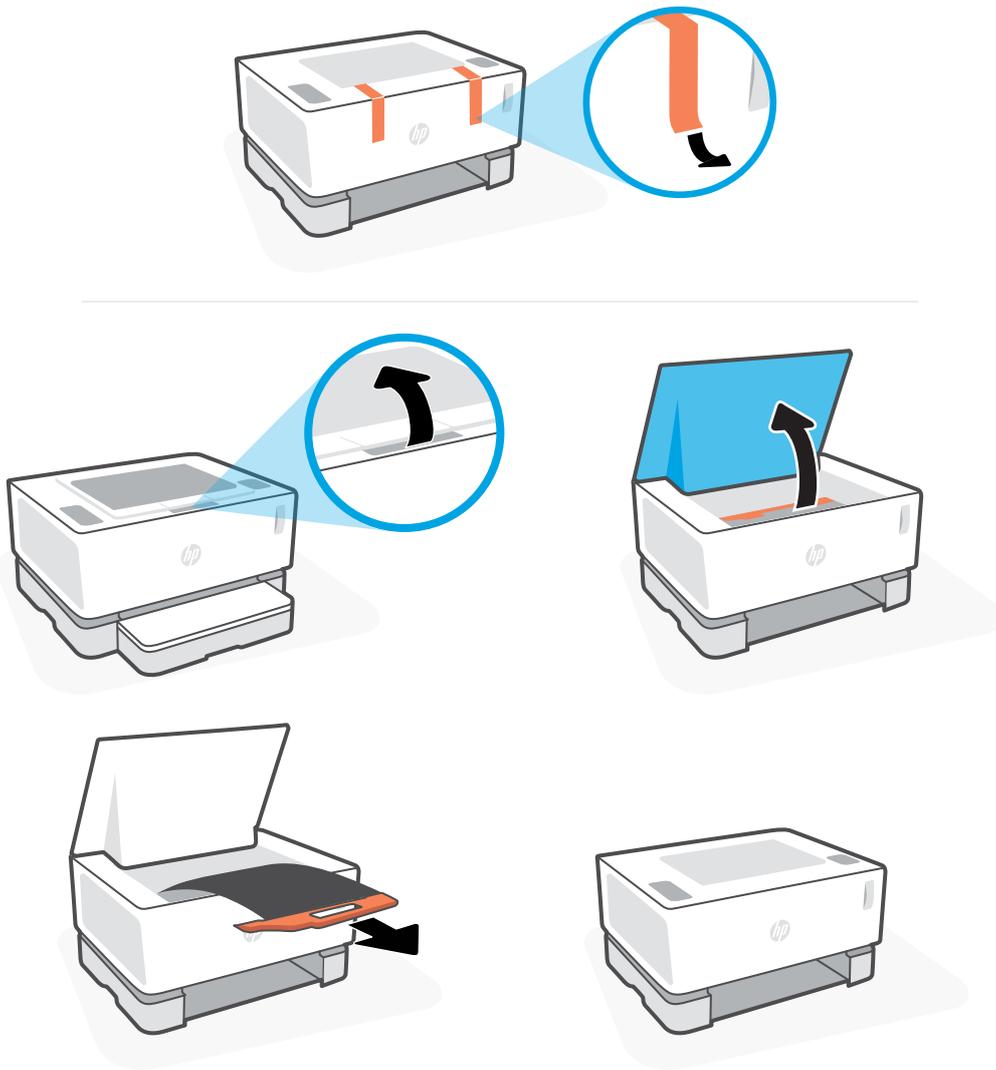


EN Remove the packing tape. Lift the top cover, and then remove and recycle the orange plastic handle with the attached black sheet.

2

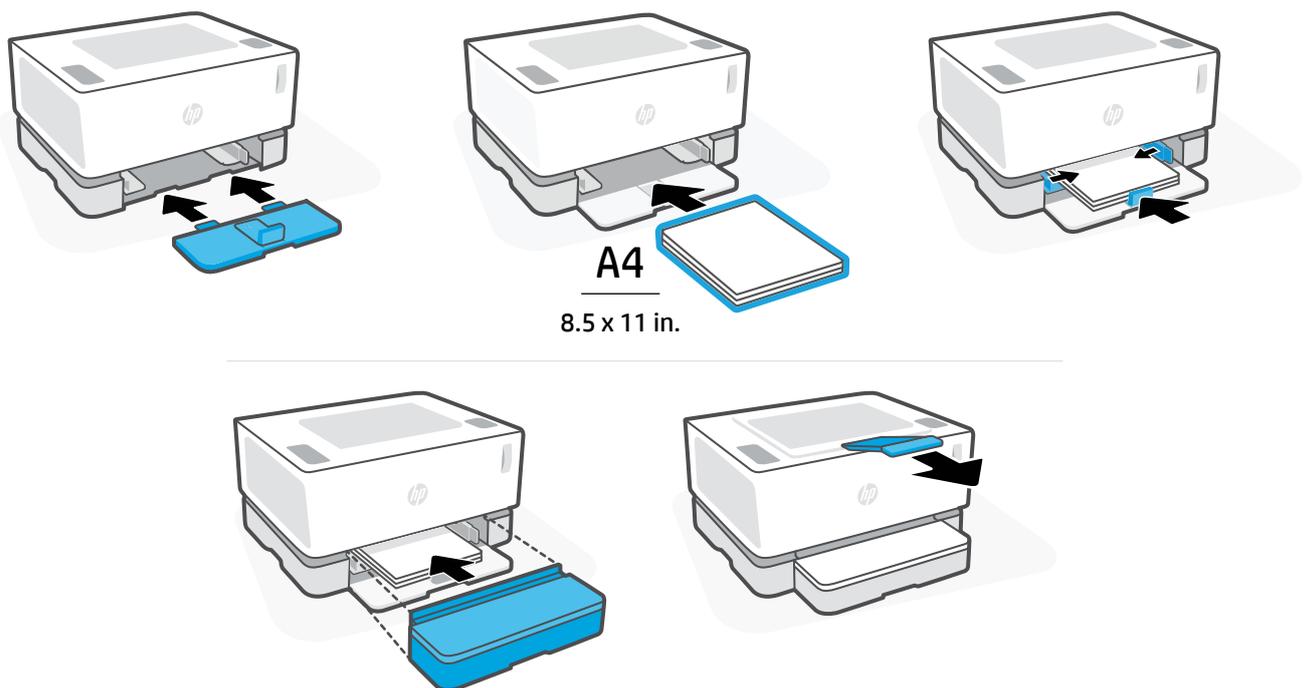

EN Install the input tray, load paper, and then slide the cover into place over the tray. Pull out the output bin extension.

3

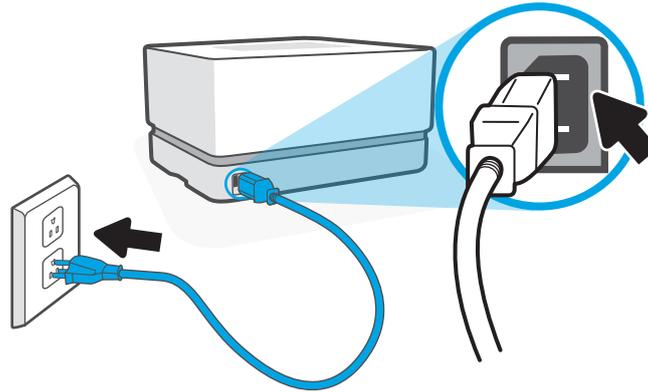

EN Plug in the printer. The printer turns on when it is plugged in and can take up to 1 minute to warm up. You will hear a series of noises, which is normal. When the Ready light  stops blinking, the printer is ready.

Note: Do not press the Power button  as this will turn off the printer and stop the warm-up process.

4



EN To complete setup, get HP software at **123.hp.com**.

Note: To set up and print from a mobile device, you must have a wireless-capable printer.



www.hp.com/support/Neverstop1000

The Apple logo is a trademark of Apple Inc., registered in the US and other countries.

App Store is a service mark of Apple Inc.

Android, Google Play, and the Google Play logo are trademarks of Google Inc.

Printed in China

© Copyright 2019 HP Development Company, L.P.



4RY22-90924